

Remotelock 7i - Salto Instructions

These instructions should be read in conjunction with the Remotelock 7i Installation manual.


As you are fitting the Salto mortice latch you do not require the 25mm barrel latch that is supplied with the 7i. In addition you do not need the Fire Cup or Cable Tube.




1. Fit the Salto latch as per the enclosed instructions. It is backset 60mm. Offer up the paper drilling template that is included with the 7i and drill as above.




2. On the keypad side, insert the spindle and spring as shown

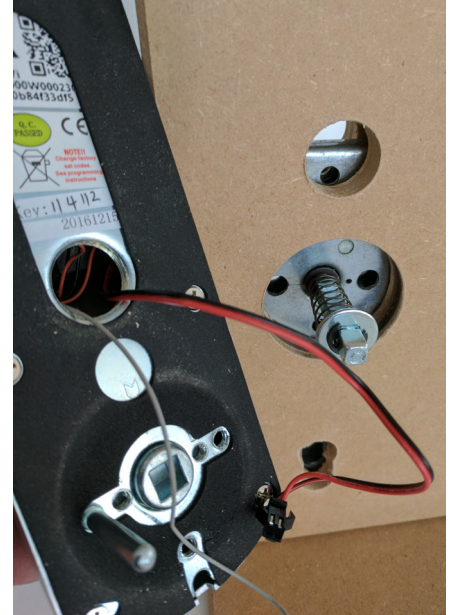

3. Insert the latch support pin on the inside of the front plate in either outer hole.

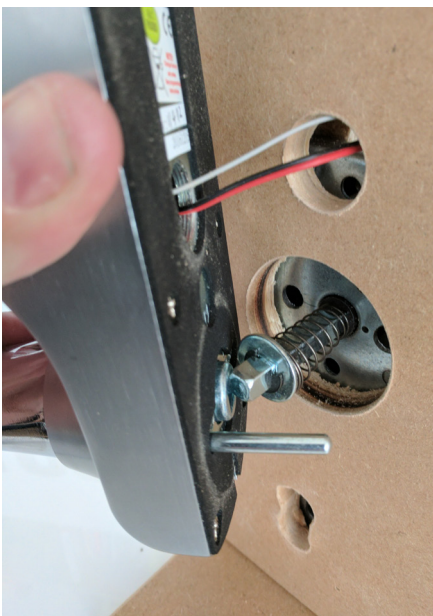

4. Thread the power cable and wifi antenna cable through the top hole. Insert the spindle into the spindle hole on the keypad and offer up to the door.

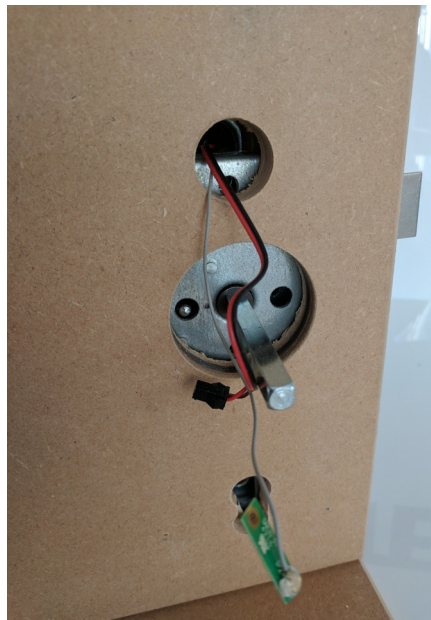

5. This is how it should now look on the inside of the door.



6. Fit the interior fixing plate and alignment insert over the spindle. Screw in the 3 fixing bolts, make sure these have been cut to the right length. See installation instructions. Connect the power cable and the remove the alignment insert.

Remotelock 7i - Salto Instructions



7. Fit the internal lock body, carefully pull through the wifi cable. Tighten the 4 allen screw bolts.



8. Fit 4 x AA batteries. Connect the wifi antenna to the battery cover and fix using the allen screw bolt.



9. Fit the internal handle.



10. Fit the external handle in the same way.